



UPDATE

GAME:PAD 4 S WIRELESS™
Firmware Update Anleitung

GAME:PAD 4 S WIRELESS™
Firmware Update Manual

GAME:PAD 4 S WIRELESS™

Firmware Update Manual

(ENGLISH)

STEP 1

Open the program and the following screen will appear.



STEP 2

Connect the GAME:PAD 4 S WIRELESS to your PC via USB.

STEP 3

Wait until update is finished and don't remove the GAME:PAD 4 S WIRELESS during the process.



STEP 4

When you see the following screen, the update is finished and you can remove the GAME:PAD 4 S WIRELESS.



TROUBLESHOOTING


If you see this screen after STEP 3, remove GAME:PAD 4 S WIRELESS and restart the program again.



If the screen below appears, please check if:

1. The GAME:PAD 4 S WIRELESS was removed during the update process
2. The USB cable is connected properly and in working condition
3. The USB port is working
4. The battery was charged then try again

Please confirm the points above are solved before repeating the update.

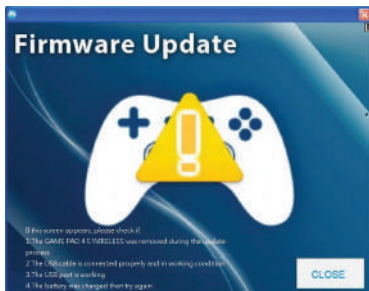

GAME:PAD 4 S WIRELESS™ Firmware Update Anleitung

(DEUTSCH)

SCHRITT 1

Starte die Software und das folgende Fenster erscheint.



SCHRITT 2

Verbinde das GAME:PAD 4 S per USB-Kabel mit deinem PC. Warte einen Moment bis das Update startet.

SCHRITT 3

Warte bis das Update beendet wurde und entferne das GAME:PAD 4 S WIRELESS nicht während des Vorgangs.



SCHRITT 4

Wenn du das folgende Fenster siehst, ist das Update fertig und du kannst das GAME:PAD 4 S WIRELESS entfernen.



FEHLERBEHEBUNG

Wenn das untere Fenster nach SCHRITT 4 erscheint, entferne das GAME:PAD 4 S WIRELESS von deinem PC und starte das Programm neu.



Wenn das untere Fenster erscheint, prüfe ob:

- das GAME:PAD 4 S während des Update-Vorgangs entfernt wurde.
- das USB-Kabel richtig angeschlossen ist und funktioniert.
- der USB-Anschluss funktioniert.

Stelle sicher, dass die oberen Punkte erledigt sind, bevor du das Update wiederholst.

