

#### STEP 4

Wait until the progress bar is completely full.

A "Download successful!" message will pop up and **all four LED indicators start flashing. After finished, close the window.**



**Attention: If the four LED indicators do not flash, do not remove the USB cable! Retry the update by pressing "Start" a second time. Failing to follow this step can break the controller!**

#### STEP 5

Remove the USB cable after the update is completed and **the four LED indicators are off.**

#### STEP 6

For some controller versions, you need to choose your product in order to update it. The Update software will prompt you to choose your controller from the 4 possible options. Wired or wireless controller, thin or wide Analog Trigger versions.



#### STEP 7

Follow STEP 3 to 5.



**GAME:PAD S™ and S PRO™**  
Switch Controller Update Instructions

**GAME:PAD S™ und S PRO™**  
Switch Controller Update Anleitung

## GAME:PAD S™ und S PRO™ Switch Controller Update Anleitung

(DEUTSCH)

### SCHRITT 1


Lade den Updater im Support-Bereich der snakebyte-Website herunter und öffne ihn.



### SCHRITT 2


Drücke und halte den "+"-Button auf deinem Controller gedrückt, dann verbinde ihn mit einem USB-Anschluss deines PCs per USB-Kabel.

**Der zweite LED-Indikator auf dem Controller leuchtet auf.**



### SCHRITT 3

Klicke auf den "Start"-Button des Updaters um den Update-Vorgang zu starten.

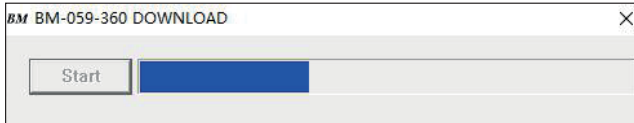


### SCHRITT 4

Update finished:

Eine "Download successful"-Nachricht öffnet sich und **alle vier LED-Indikatoren auf dem Controller blinken kurz.**



**Achtung: Falls die vier LED-Indikatoren nicht kurz blinken, entferne nicht das USB-Kabel! Wiederhole das Update mit einem zweiten Druck auf "Start". Eine Missachtung dieses Schritts kann zu einem Defekt des Controllers führen!**

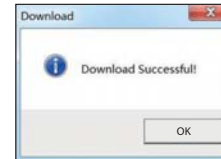

### SCHRITT 5


Entferne das USB-Kabel, nachdem die Aktualisierung abgeschlossen ist und **die vier LED-Anzeigen aus sind.**

### SCHRITT 6

Bei manchen Versionen des Controllers musst du erst dein Produkt auswählen, um es zu aktualisieren.

Die Update-Software fordert dich auf, aus vier möglichen Optionen auszuwählen.

Verkabelter oder drahtloser Controller, dünne oder breite Analog Trigger Ausführung.

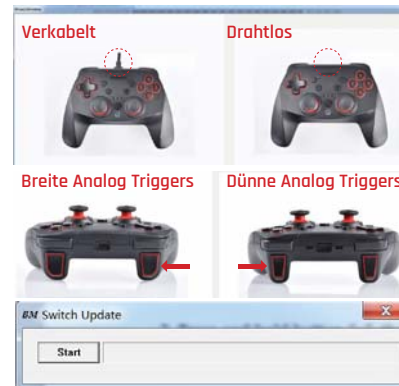

### SCHRITT 7

Folge Schritt 3 bis 5.

## GAME:PAD S™ and S PRO™ Switch Controller Update Instructions

(ENGLISH)

### STEP 1


Download the updater from the support section of the snakebyte website and open it.



### STEP 2

Press and hold the "+" button of your controller, then connect it to a USB port of your PC via a USB cable.

**The second LED indicator on the controller lights up.**



### STEP 3

Press the "Start" button of the updater to start update process.

